Models: Staidtreat® WBA® | Staidtreat® WBA Active®| Staidtreat® BXW® | Staidtreat® BXA® | Staidtreat® BXA Active®

INSTALATION: SCHEMATIC DRAWINGS

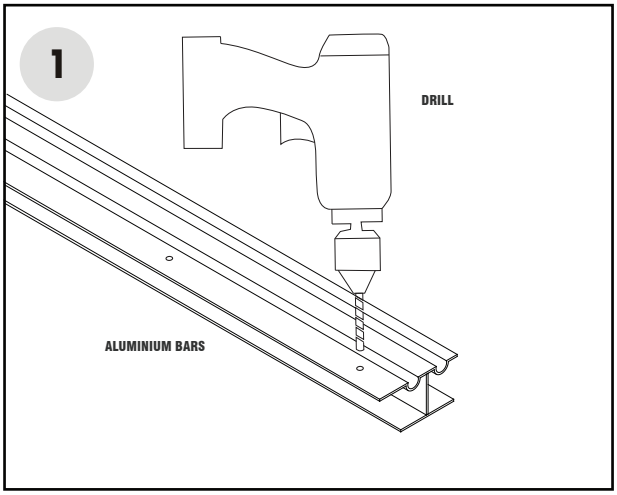

1. Drill the holes in the aluminium bar.

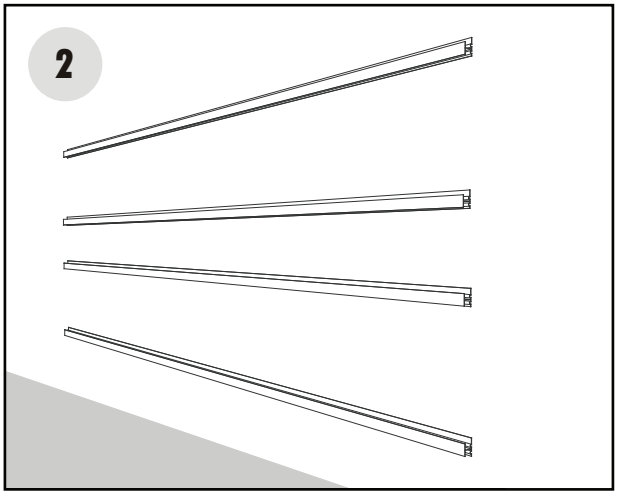

2. Fix the aluminium bar to the walls using the apropriate plugs and srews according to the surface base.

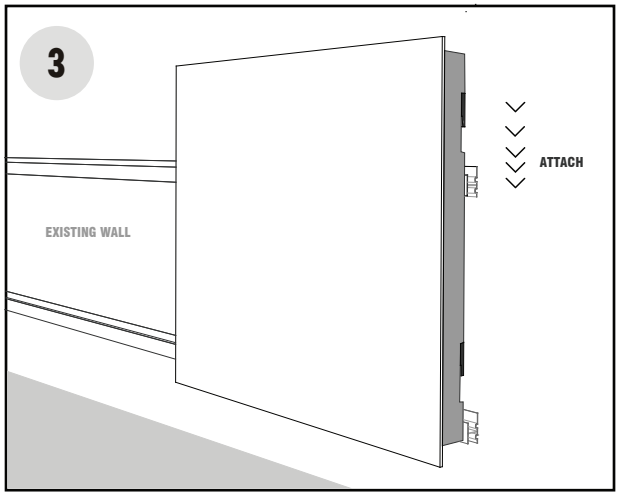

3. Then, attach the panel to connect with the aluminium bar into the correct position.

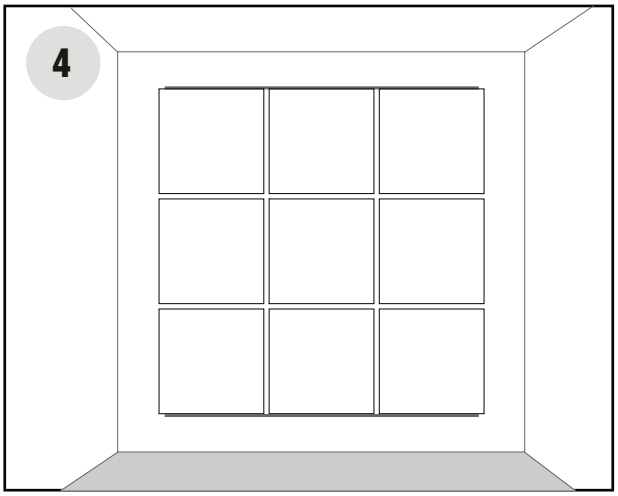

4. Repeat the operation until you have all the panels placed on the Walls.

INSTALATION: EXAMPLE IMAGES

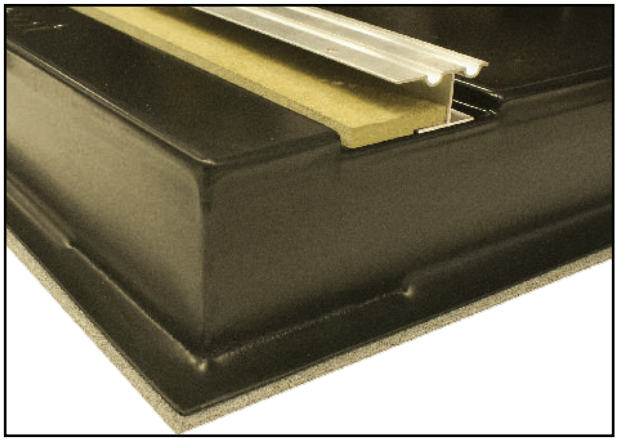

Av. Pedro Álvares Cabral - Centro Empresarial Sintra-Estoril V - Armazém B18 - 2710-297 Sintra - Portugal
Phone +351 219243097 - Fax +351 21 9243098 - GPS: LAT 38°42'26.08''N LOG 9°22'17.57''W
www.jocavi.net - mail: info@jocavi.net - www.facebook.com/jocavi.net

Models: Staidtreat® WBA® | Staidtreat® WBA Active®| Staidtreat® BXW®

INSTALATION: SCHEMATIC DRAWINGS

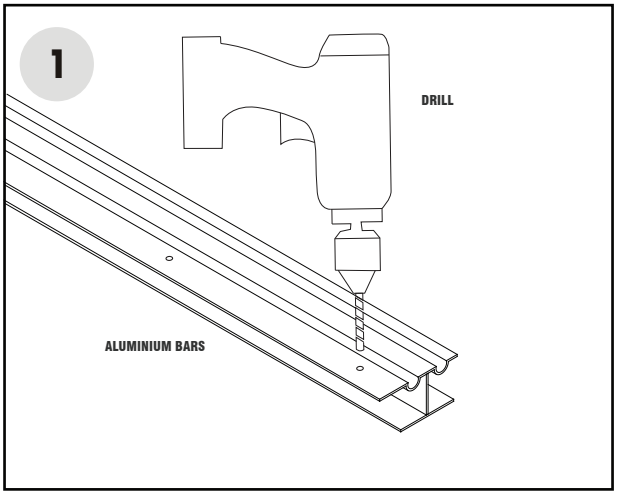

1. Drill the holes in the aluminium bar.

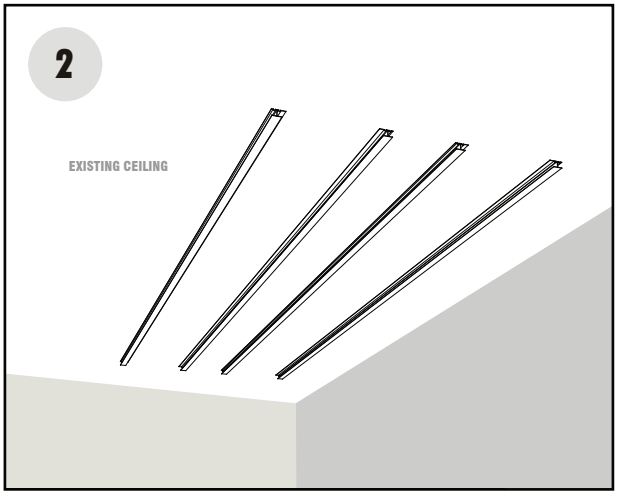

2. Fix the aluminium bar to the ceiling using the apropriate plugs and srews according to the surface base. Then, attach the panel to connect with the aluminium bar.

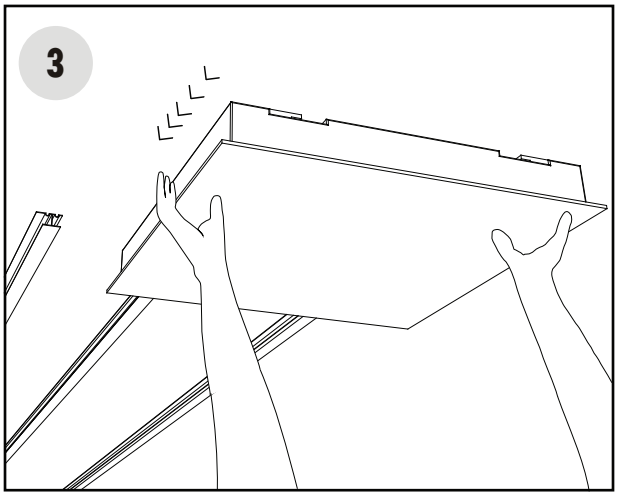

3. Joint the panel to the aluminium bar and slide it into the correct position.

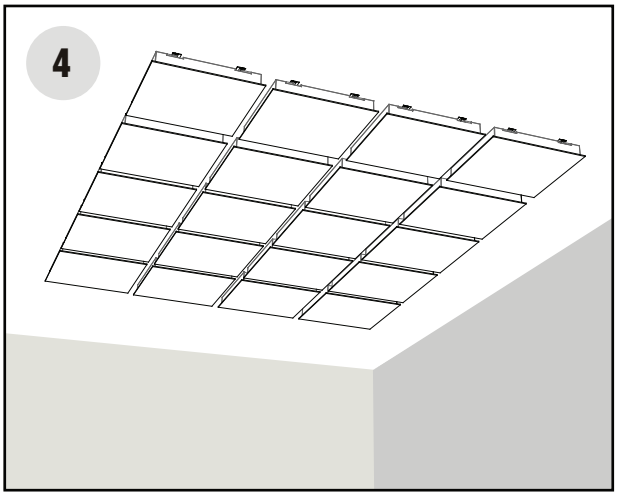

4. Repeat the operation until you have all the panels placed on the Ceiling.

INSTALATION: EXAMPLE IMAGES

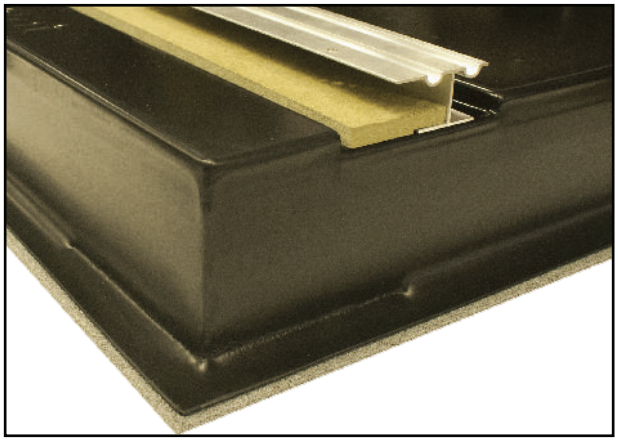

Av. Pedro Álvares Cabral - Centro Empresarial Sintra-Estoril V - Armazém B18 - 2710-297 Sintra - Portugal
Phone +351 219243097 - Fax +351 21 9243098 - GPS: LAT 38°42'26.08''N LOG 9°22'17.57''W
www.jocavi.net - mail: info@jocavi.net - www.facebook.com/jocavi.net